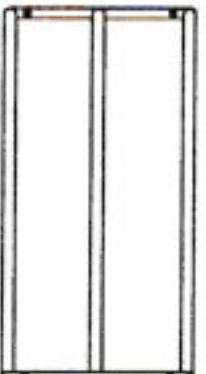
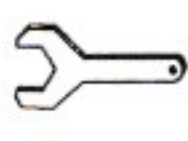



MODEL :WOODEN POST / SPRUNG WOOD BED BASE

SIZE :SINGLE BED


ASSEMBLY INSTRUCTION

Part List							Hardware						
WOODEN POST	WOODEN POST	HEAD BOARD	FOOT BOARD	SIDE RAIL	CROSS RAIL	SPRUNG WOOD	SINGLE CONNECTOR	M6 X 40mm	M6 X 20mm	PLASTIC WASHER	M6 HEX NUT	ALLEN KEY M4	SPANNER
													
2 PCS	2 PCS	1 PCS	1 PCS	2 PCS	1 PCS	12 PCS	24 PCS	2 PCS	16 PCS	8 PCS	2 PCS	1 PCS	1 PCS



Step 1

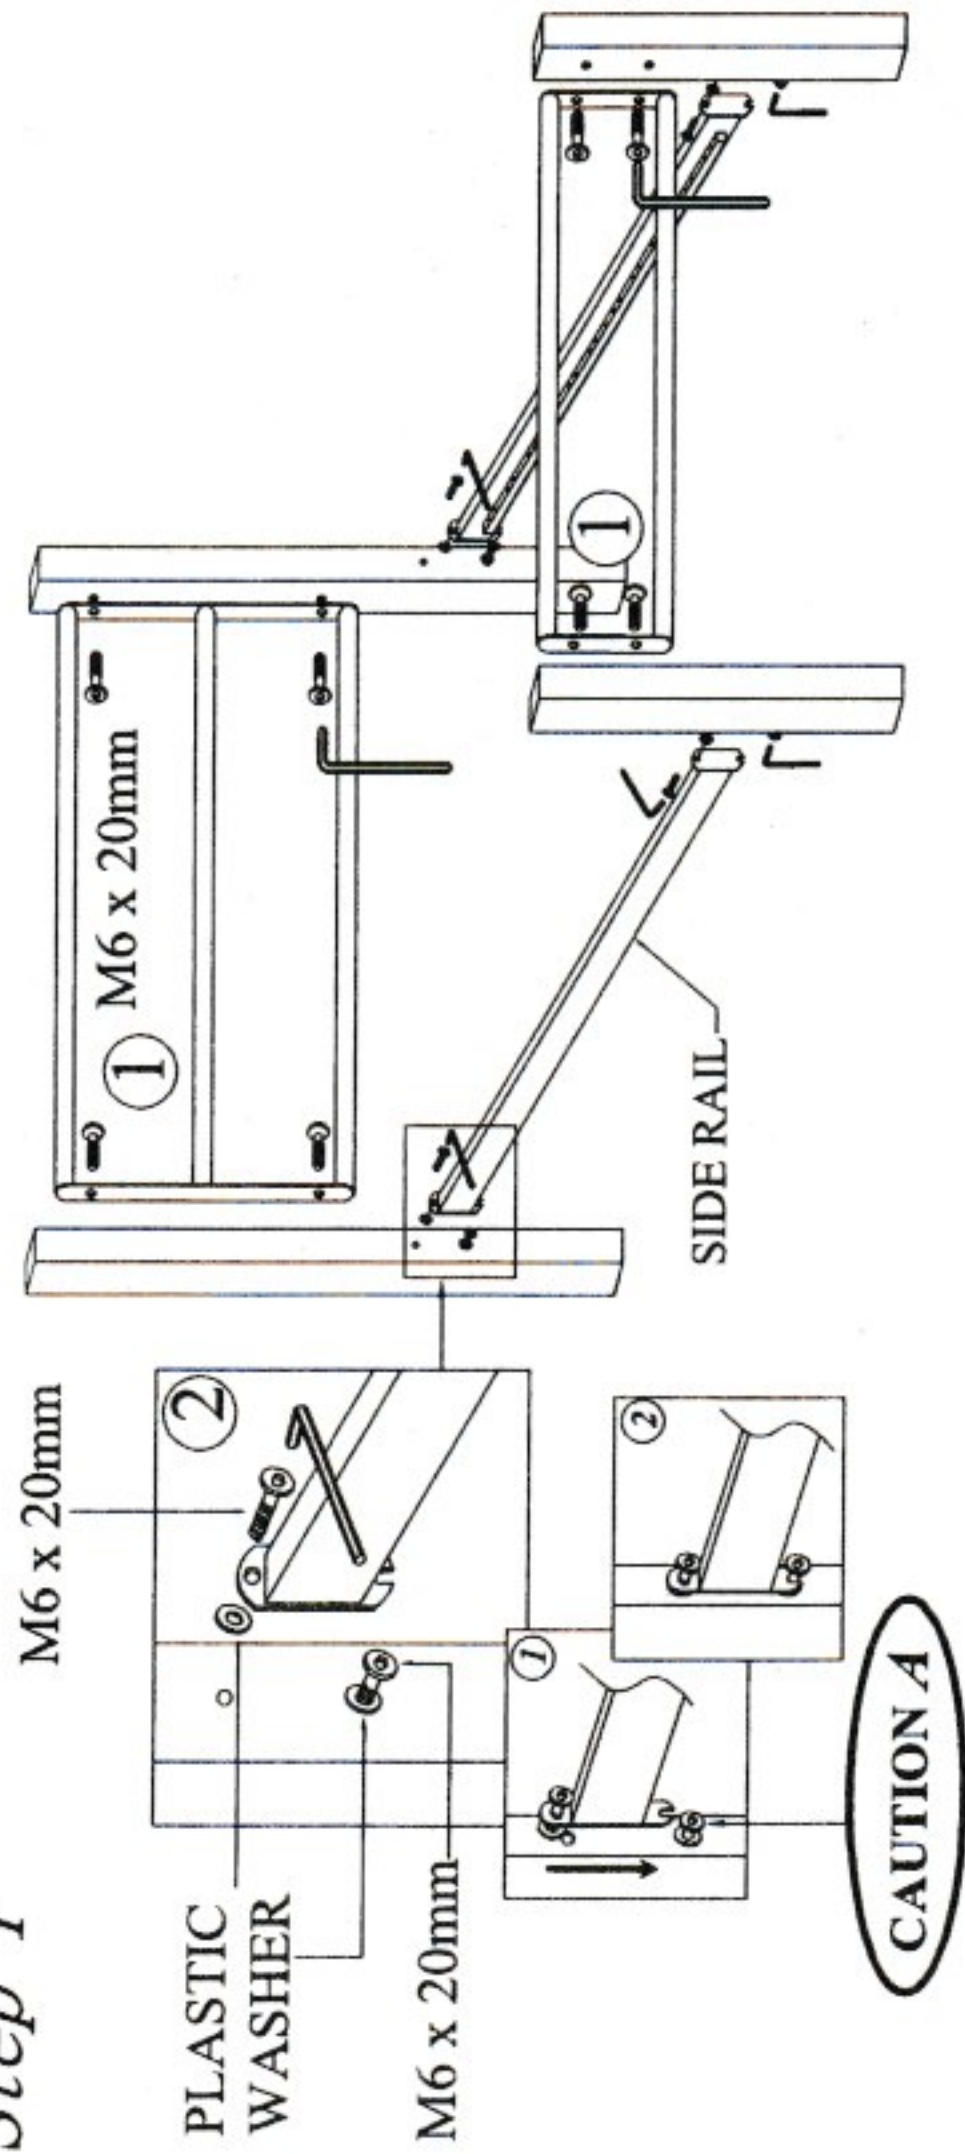

Step 3

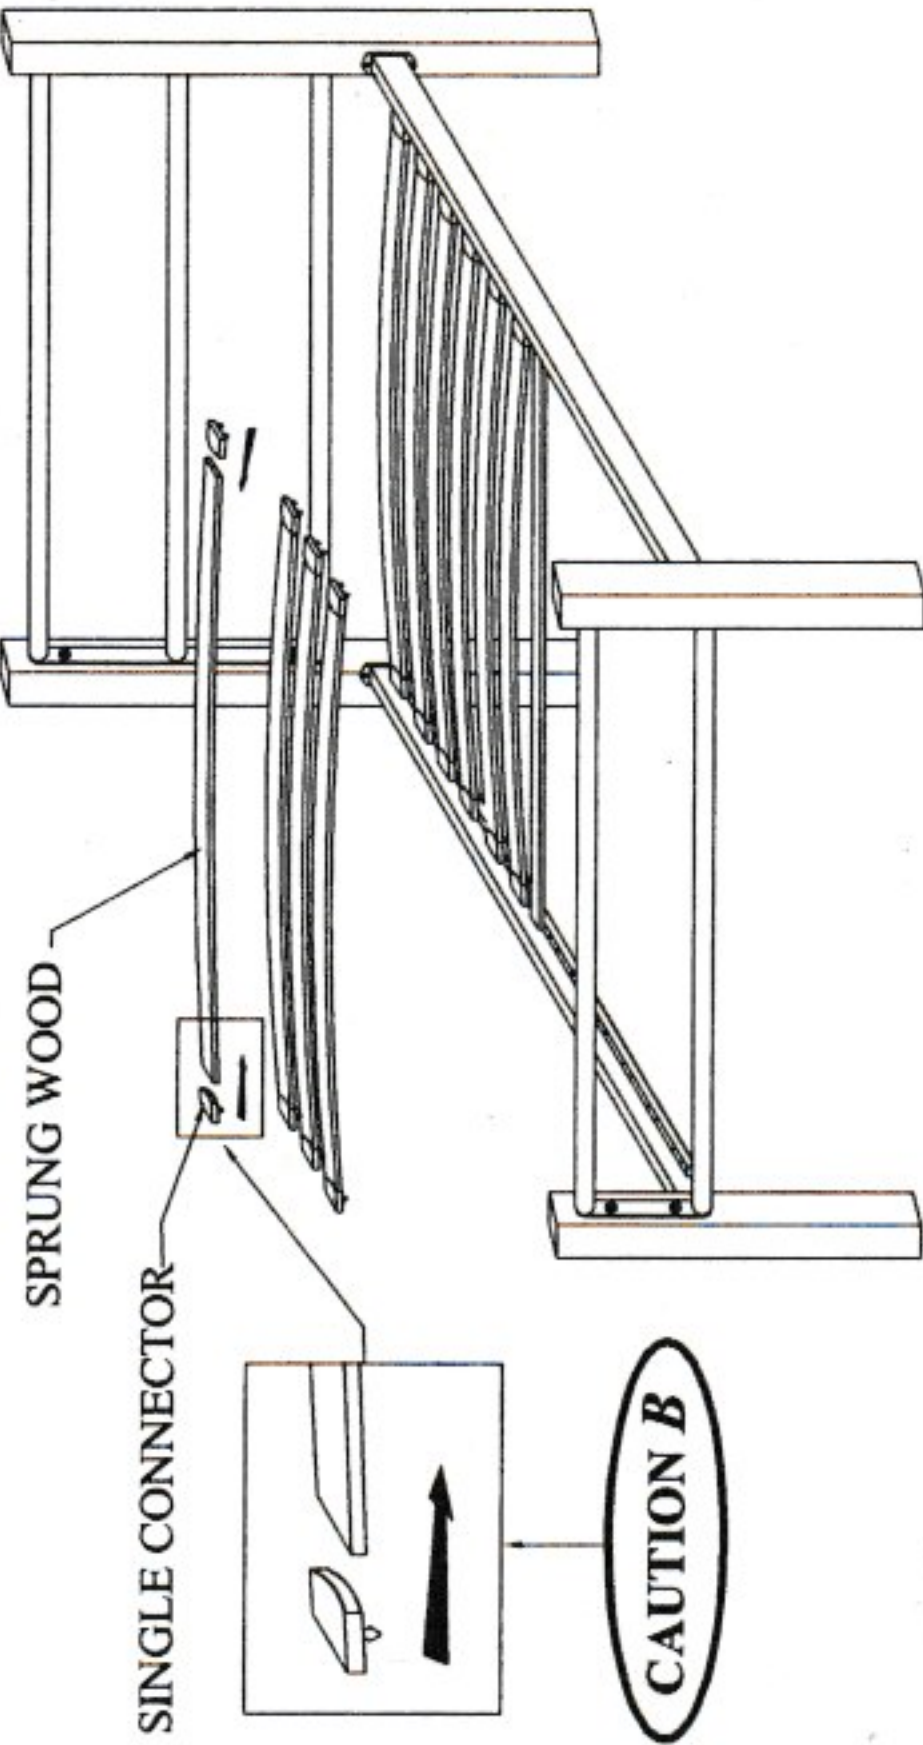

Step 2

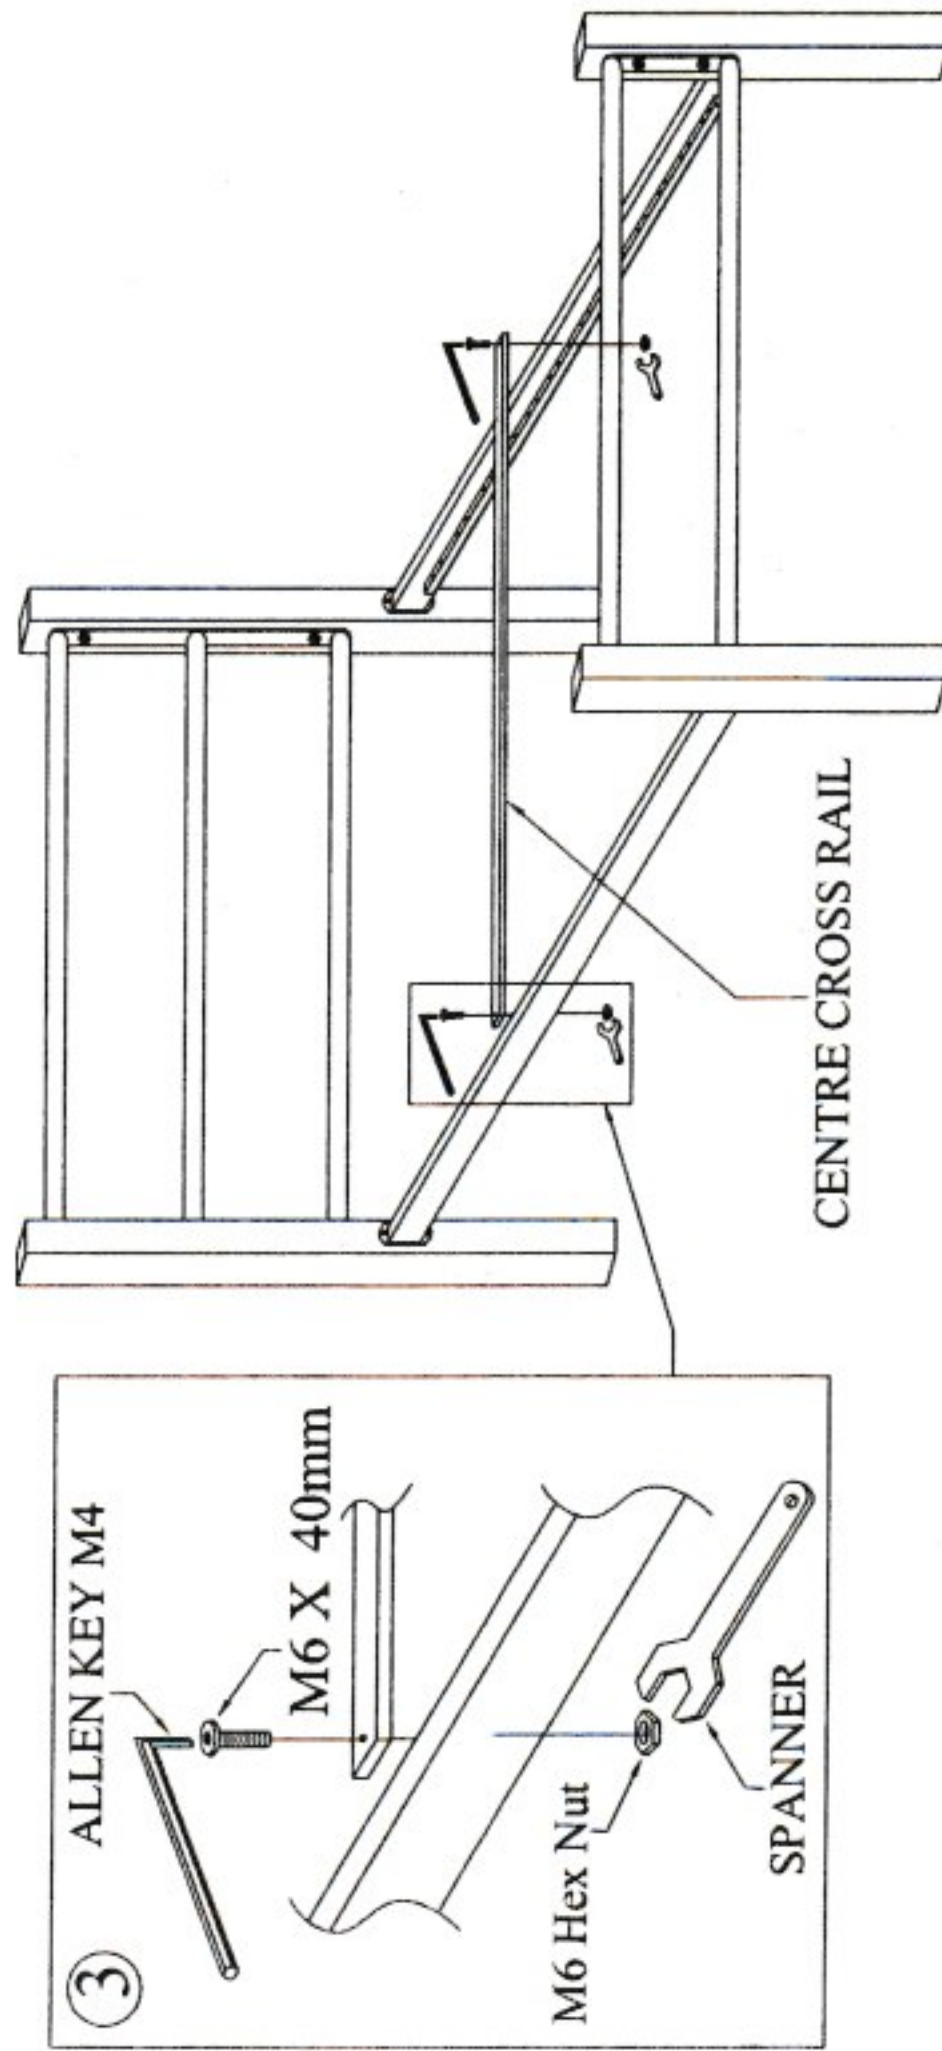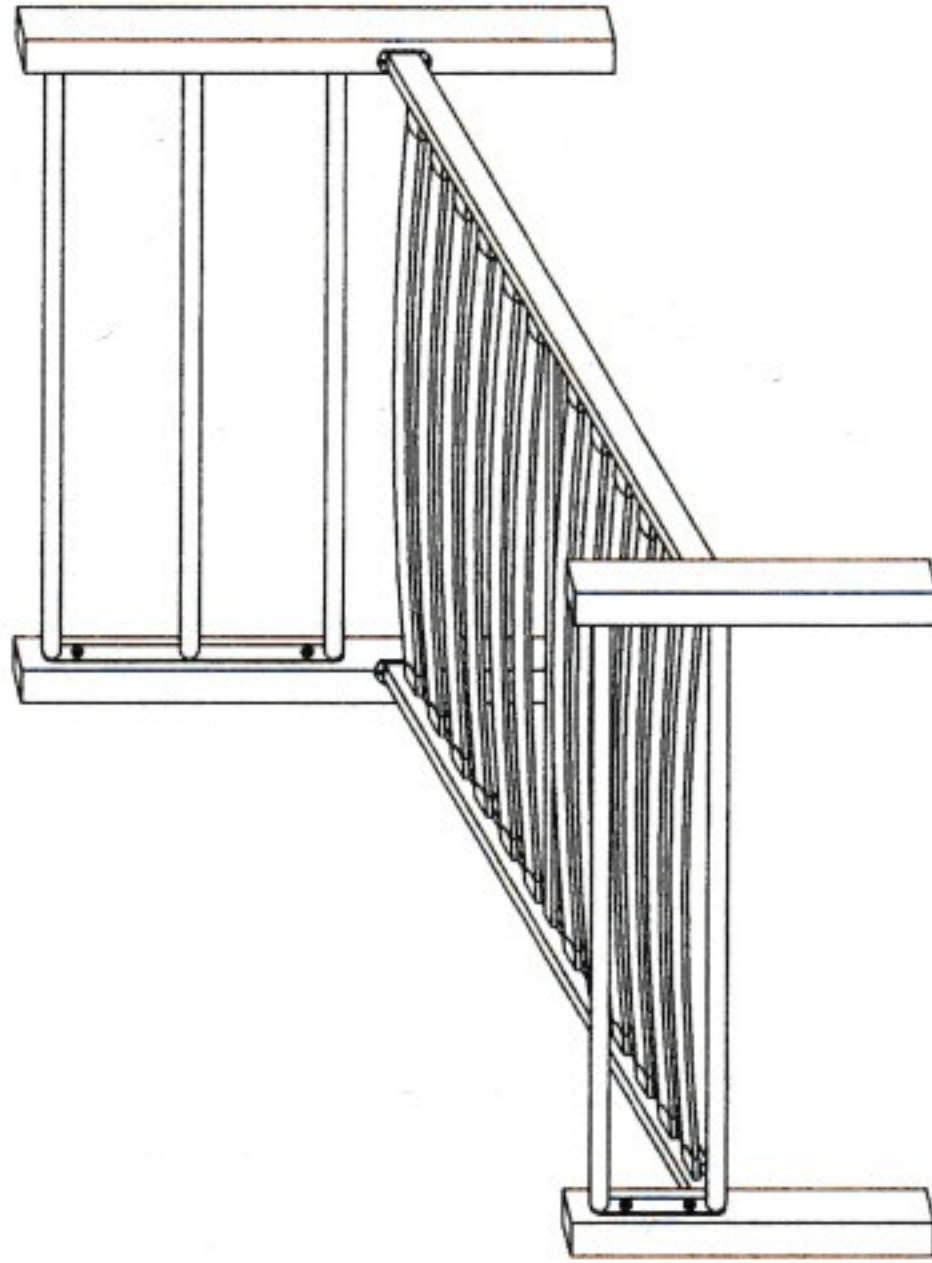

A **CAUTION!**
Do not tight screw, left around 5mm before completely assembled.

B **CAUTION!**
Make sure sprung wood is fully push tightly into single connector, if not by slowly knock single connector until tight into sprung wood.

IMPORTANT!
• Tighten all screw and complete product as shown
• "Ensure cross rails are located in the side rails before placing the mattress on the bed frame"

ASSEMBLY COMPLETE